




Mighty Dropper Instruction Manual

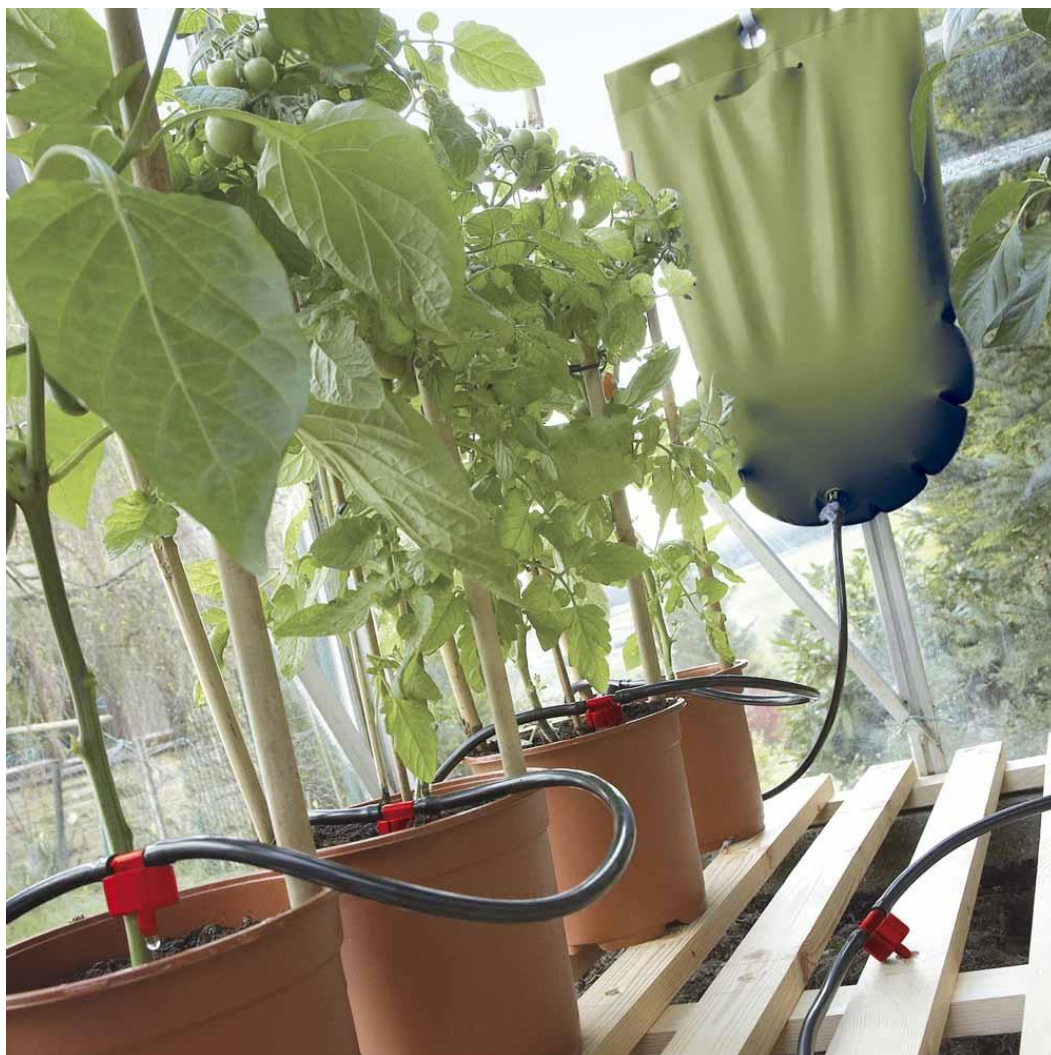

After Sales Support
Call 0871 911 7031
Email
customerservice@gardengearonline.co.uk
Product Code D3659

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from date of purchase

For correct usage, please read these instructions carefully before use and keep in a safe place for future reference.

General information and safety warnings


- Remove all packaging and make sure that the product is intact. Do not leave packaging materials like bags and staples within the reach of children and pets.
- Read through these instructions fully before using the product.
- Only suitable for use with cold tap water. Not suitable for use with any other liquids.
- Regularly inspect the fixings for signs of wear.
- When the product is no longer needed, drain it of any remaining water and allow to air dry. Store in a cool, dry place away from direct sunlight.
- Do not use the product for anything other than its intended use.
- Do not attempt to repair, disassemble or modify the product.
- Do not drink from the product.
- Do not let children play with this product.
- Not suitable for commercial purposes.

Description of parts



Assembly

1. Fix the plastic hanging hooks through the left and right hanging holes at the top of the water bag.
2. Secure in the desired position using the included nuts and bolts.
3. Insert the wide end of the 2-way tube connector, into the valve at the base of the water bag.
4. Make sure that the bottom of the water bag is positioned at the same height as the drippers. This system works best at a low water pressure, raising the bag height will increase the water pressure.
5. Connect the long section of irrigation tube to the exposed end of the 2-way tube connector, which is already inserted into the water bag valve.
6. Extend the irrigation tube, which is now connected to the water bag and mark on it your desired dripper points. You should use at least 1.5 metres of tube between the water bag and the first adjustable dripper, as this helps to reduce water pressure. Cut the tube at each of these points and connect the 6 adjustable drippers by inserting the tube ends onto the two exposed connecting points of each dripper.
7. Seal the far end of the tube by inserting the end of the bung.
8. Check that the irrigation tube has not become kinked as this may cut off the water flow.
9. Fill the water bag through the opening slit at the top of the bag if easier use a watering can to fill the bag.
10. Carefully open each of the adjustable drippers to your required drip rate. Do not set the drip rate any slower than 1 drip per second, this will cause the drip rate to slow as the water bag empties and the water pressure drops.

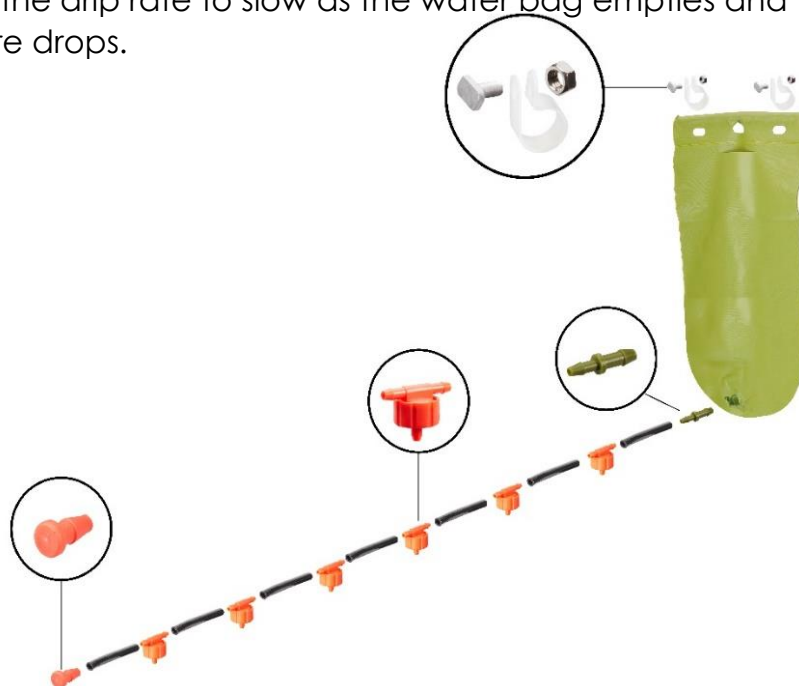

Periodically check the water levels to ensure that your plants are kept hydrated.

GUARANTEE

IMPORTANT

**Please do not return this product without first calling the Customer Service number below:
0871 911 7031***

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

Register your product for an extended 2-year warranty by visiting our website www.gardengearonline.co.uk. The product must be registered, along with your contact information, within 30 days of purchase. For full terms and conditions please visit our website.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee.

Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre.

Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

After Sales Customer Service:

Customer Service Department, Branded Garden Products Ltd, Premier House, Hortonwood 7, Telford, TF1 7GP, UK

Telephone: 0871 911 7031*

E-mail customerservice@gardengearonline.co.uk

Please retain for future reference.

Colours and contents may vary.

*Calls cost 13p per minute plus your phone company's access charge