

Garden Grow[®]

Garden Grow Cloche

Instruction Manual

G4445



Garden Gear

Pop-Up Cloche

G4445

General information and safety warnings

- Keep your plants watered and check on them daily.
- Do not put anything on top of the pop-up cloche.
- Take down the cloche if severe weather is forecast.
- Do not allow children to play with the cloche.
- Not suitable for commercial purposes.

Assembly

1. Unzip the bag and remove the product carefully. **Note:** the contents may spring open suddenly when removed from the bag so take care.
2. Unfold the pop-up cloche to its full size.
3. Put it over the area your wish to protect.
4. Locate the fabric loops in the lower corners and sides of the pop-up cloche and insert a peg into each. Push the pegs into the ground and anchor the pop-up cloche down.

Care and maintenance

- For crops that require insect pollination (such as cucumbers and strawberries) remove the pop-up or open the door during bloom to allow bees and other pollinators to enter.
- When not in use, dry the pop-up cloche thoroughly, fold and store inside. Fold the panels together and store flat.
- We do not recommend trying to fit the pop-up cloche back into the zipped bag.

GUARANTEE IMPORTANT

**Please do not return this product without first calling the Customer Service number below:
0871 911 7031***

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee.

Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre.

Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

After Sales Customer Service:

Customer Service Department, Branded Garden Products Ltd, Premier House, Hortonwood 7, Telford, TF1 7GP, UK

Telephone: 0871 911 7031*

E-mail customerservice@gardengearonline.co.uk

Please retain for future reference. Colours and contents may vary.

*Calls cost 13p per minute, plus your phone company's access charge.